PlayBase

PlayBase
Quick Start Guide

Thank-you very much for buying PlayBase we really hope you enjoy it as much as we do!

We know that nobody like reading manuals so we have created a quick start guide for you to show you the key things about using PlayBase.

Please make sure you register PlayBase, either on the device through the register application or online at the address shown below.

1. How to register product online

play-base.com/register

Connect to internet and search for play-base.com/register to register your product.

2. How to power on device

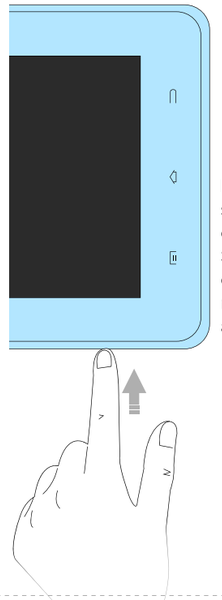

Press and hold for 3 seconds to power on/off the device. Short press to put device into standby mode and again to awaken device.

3. How to charge the device

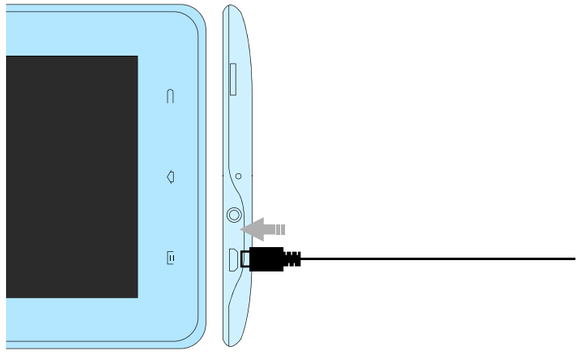

Connect one end of DC adapter to micro USB of the device and the other to the wall outlet to begin charging.

*Charging time with in-box 5V/2A DC adapter, less than 5 hours (power-off mode). Battery life may vary depending on user usage. Battery can also be charged when device (backlight off) connects to computer through USB cable. This is very slow and not recommended.

4. How to copy music/video onto the device and play

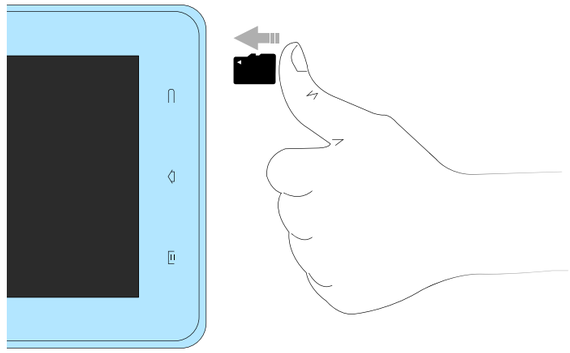

Insert microSD card with the gold contacts facing down until "click" sound is heard. Run "Explorer" program, showing all the files under the root directory. Select "SD card" to open to browse the contents in card.

To remove, close all applications or files which have been opened from the card. Push card lightly to eject it from the slot.

* Do not remove the memory card while the device is turned on. Sudden removal of the memory card may cause date loss or unpredictable hang up.

WARNING: TF Cardare a potential choking hazard if eaten/swallowed. Please provide responsible supervision to children when inserting/removing the TF card.

5. How to have quick access to notifications and settings

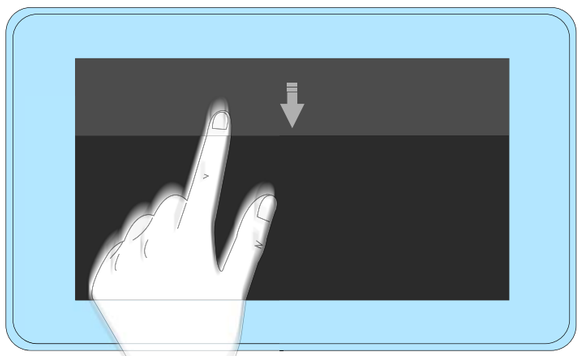

Just swipe down from the main home page to enter the drop-down menu bar. Have quick access to settings. Choose which notifications you want to see.

6. How to download new apps and games

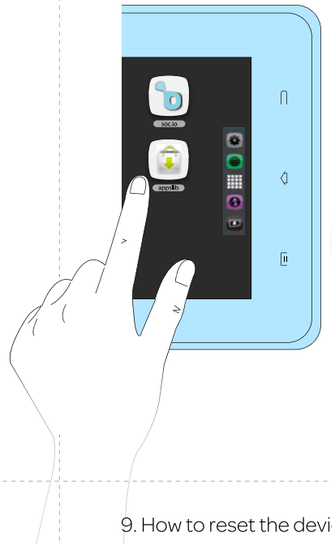

Go to either appslib or soci.io to access to thousands of applications and games.

7. How to connect to Wifi?

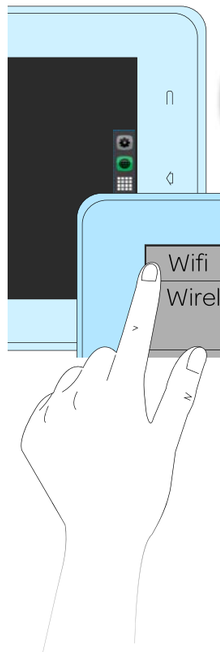

5.1. Tap on Settings icon at the side of the screen.

5.2. Select Wireless & networks > Wi-Fi to activate.
5.3. Select Wi-Fi settings > Network notification to start detecting networks. Available networks will be listed. Select the Wi-Fi network you would like to connect to.
5.4. Select Add Wi-Fi network to add a connection.
5.5. When internet connection is successful, the wireless connection icon in the status bar will appear.
5.6. Go back to Home screen/application list to click on Browser icon to start surfing internet.

NOTE: Connecting to a secured network will prompt for password. Enter password then select Connect.

8. How to improve battery performance

Wifi	Videos	Brightness	= Battery
OFF	ON	LOW	5 HOURS
ON	ON	LOW	4 HOURS
OFF	ON	MED	4 HOURS
ON	ON	HIGH	3.5 HOURS

9. How to reset the device

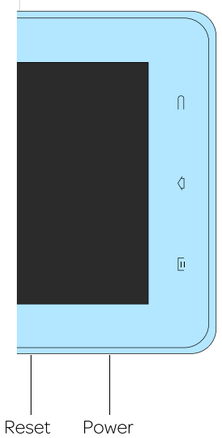

Insert a pin for a few seconds to activate the reset button when screen freezes or when system is running slow. Press the power button after the reset button is activated.

10. How to contact PlayBase support?

support@playbase.com

Connect to internet and email your enquiries to support@playbase.com. Alternatively please log on to play-base.com and access the forum.